

Quick guide

HAUCK

— V I B R A - P U L S E —



Explanation

Thank you for choosing a product from
Hauck.

1. Take the Tamper out of the box.
2. Open the batterycover in the back of the handle.
3. Insert the battery and screw the cover hand-tight.
4. Your vibra is now ready for use. Now it's in mode one with a running time for two seconds.
5. For the setting press the start button for at least three seconds. This is confirmed by a short vibration.
6. You can then select a program between one and four with the number of pulses you apply to the push button. Example: If you press three times, the tamper will confirm program three with three consecutive vibrations.
7. Immediately after the last vibration, you can select the running time by pressing and holding the push button for the desired time. The time is programmable between 0.6 and three seconds.
8. Further information on the programs and the safety instructions to be observed can be found in the operating instructions.

Quick guide

HAUCK

— V I B R A - P U L S E —



Explanation

Thank you for choosing a product from
Hauck.

1. Take the Tamper out of the box.
2. Open the batterycover in the back of the handle.
3. Insert the battery and screw the cover hand-tight.
4. Your vibra is now ready for use. Now it's in mode one with a running time for two seconds.
5. For the setting press the start button for at least three seconds. This is confirmed by a short vibration.
6. You can then select a program between one and four with the number of pulses you apply to the push button. Example: If you press three times, the tamper will confirm program three with three consecutive vibrations.
7. Immediately after the last vibration, you can select the running time by pressing and holding the push button for the desired time. The time is programmable between 0.6 and three seconds.
8. Further information on the programs and the safety instructions to be observed can be found in the operating instructions.

Quick guide

HAUCK

— V I B R A - P U L S E —



Explanation

Thank you for choosing a product from
Hauck.

1. Take the Tamper out of the box.
2. Open the batterycover in the back of the handle.
3. Insert the battery and screw the cover hand-tight.
4. Your vibra is now ready for use. Now it's in mode one with a running time for two seconds.
5. For the setting press the start button for at least three seconds. This is confirmed by a short vibration.
6. You can then select a program between one and four with the number of pulses you apply to the push button. Example: If you press three times, the tamper will confirm program three with three consecutive vibrations.
7. Immediately after the last vibration, you can select the running time by pressing and holding the push button for the desired time. The time is programmable between 0.6 and three seconds.
8. Further information on the programs and the safety instructions to be observed can be found in the operating instructions.

Quick guide

HAUCK

— V I B R A - P U L S E —



Explanation

Thank you for choosing a product from
Hauck.

1. Take the Tamper out of the box.
2. Open the batterycover in the back of the handle.
3. Insert the battery and screw the cover hand-tight.
4. Your vibra is now ready for use. Now it's in mode one with a running time for two seconds.
5. For the setting press the start button for at least three seconds. This is confirmed by a short vibration.
6. You can then select a program between one and four with the number of pulses you apply to the push button. Example: If you press three times, the tamper will confirm program three with three consecutive vibrations.
7. Immediately after the last vibration, you can select the running time by pressing and holding the push button for the desired time. The time is programmable between 0.6 and three seconds.
8. Further information on the programs and the safety instructions to be observed can be found in the operating instructions.

Quick guide

HAUCK

— V I B R A - P U L S E —



Explanation

Thank you for choosing a product from
Hauck.

1. Take the Tamper out of the box.
2. Open the batterycover in the back of the handle.
3. Insert the battery and screw the cover hand-tight.
4. Your vibra is now ready for use. Now it's in mode one with a running time for two seconds.
5. For the setting press the start button for at least three seconds. This is confirmed by a short vibration.
6. You can then select a program between one and four with the number of pulses you apply to the push button. Example: If you press three times, the tamper will confirm program three with three consecutive vibrations.
7. Immediately after the last vibration, you can select the running time by pressing and holding the push button for the desired time. The time is programmable between 0.6 and three seconds.
8. Further information on the programs and the safety instructions to be observed can be found in the operating instructions.

Quick guide

HAUCK

— V I B R A - P U L S E —



Explanation

Thank you for choosing a product from
Hauck.

1. Take the Tamper out of the box.
2. Open the batterycover in the back of the handle.
3. Insert the battery and screw the cover hand-tight.
4. Your vibra is now ready for use. Now it's in mode one with a running time for two seconds.
5. For the setting press the start button for at least three seconds. This is confirmed by a short vibration.
6. You can then select a program between one and four with the number of pulses you apply to the push button. Example: If you press three times, the tamper will confirm program three with three consecutive vibrations.
7. Immediately after the last vibration, you can select the running time by pressing and holding the push button for the desired time. The time is programmable between 0.6 and three seconds.
8. Further information on the programs and the safety instructions to be observed can be found in the operating instructions.